

KOGANEI

Auxiliary

AIR BLEEDER

INSTRUCTION MANUAL Ver.1.0


Handling Instructions and Precautions

● Mounting

- Mount the air bleeder in a vertical position.
- For the most efficient air bleed operation, mount the unit either directly onto the cylinder, or at the highest position in the piping system.
- If the piping system has an area where air bubbles tend to accumulate, mount the unit at that location.

● Bleeding the air

- Whenever air pressure is applied to the converter, press the air bleed button to bleed out the air.

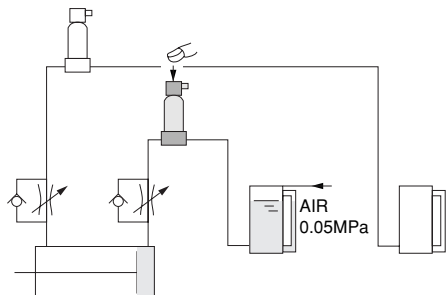

- For the oil supplied to the converter, always use the recommended hydraulic oil. For recommended hydraulic oil, see p.554.
- The air bleeder body is made of polycarbonate. Avoid use in locations where the ambient atmosphere contains organic solvents, etc.

- Symbol**



Order Codes

Inner Construction and Major Parts

