

KOGANEI

Air Cylinder

KNOCK CYLINDER

INSTRUCTION MANUAL Ver.1.0

Handling Instructions and Precautions



Mounting

Double acting type

1. In applications with high load ratio or high speed, use an externally mounted stopper to prevent direct shock to the cylinder.
2. Do not let the tightening torque for the mounting nut exceed the figures in the table below.


Bore size	Maximum tightening torque
6 [0.236in.]	1079 [95.5]
10 [0.394in.]	1275 [113]
16 [0.630in.]	1961 [174]

N-cm [in.-lbf]


Single acting push type

1. Using the centering location on the body can improve mounting precision on panel mounting. In addition, set the end face of the wrench flat as a reference plane does not need any adjustment of the rod end position. Moreover, the rod end position can be freely set through the use of cylindrical spacer matching the outer diameter of the cylinder body. For the maximum thickness of the panel, use the values in the table below as guidelines.

●Panel mounting

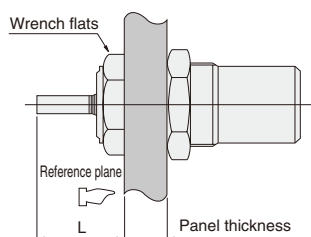

●Panel mounting

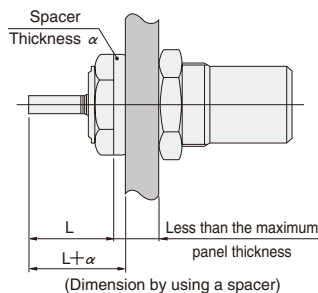

Bore size	Maximum panel thickness
6 [0.236]	8 [0.315]
10 [0.394]	9 [0.354]
16 [0.630]	10 [0.394]


mm [in.]

2. Do not let the tightening torque for the mounting nut exceed the figures in the table below.

Bore size	Maximum tightening torque
6 [0.236in.]	1226 [109]
10 [0.394in.]	1716 [152]
16 [0.630in.]	4903 [434]

N-cm [in.-lbf]

3. Let the surface roughness of the bottom of the insert mounting hole (gasket seat surface) be of medium finish (▽▽). Moreover, mounting without a gasket can be done by applying a sealing agent to the thread of the body.

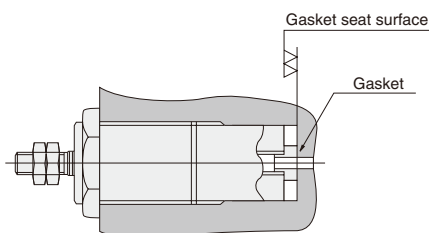


Sensor switches

Double acting type

●Setting the head side stroke end


1. Push piston rod to the fully retracted position.
2. Install a sensor switch in a holder without tightening a mounting screw all the way, move the switch from head side to rod side until it turns ON (for **ZC130**, **ZC153**, **CS11T**, when the LED lights up), then move the switch 1 notch (= 1mm [0.039in.]) for **ZC130** and **ZC153**, or 2 notches (= 2mm [0.079in.]) for **CS5T** and **CS11T** toward the rod side, and tighten the mounting screw.

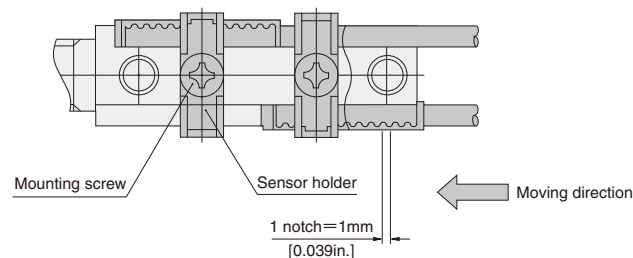


●Setting the rod side stroke end

Conduct the same procedure as the head side, but on the reversed way.

1. Pull piston rod to the fully extended position.
2. Install a sensor switch in a holder without tightening a mounting screw all the way, move the switch from rod side to head side until it turns ON, then move the switch 1 notch (=1mm [0.039in.]) for **ZC130**, **ZC153**, or 2 notches (=2mm [0.079in.]) for **CS5T** and **CS11T** toward head side and tighten the mounting screw.

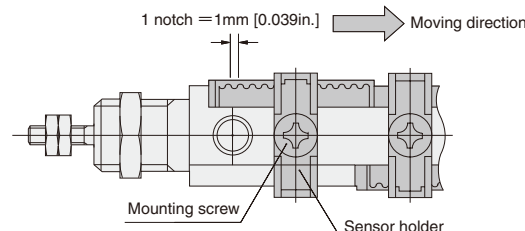


Caution when installing cylinder with sensor switch

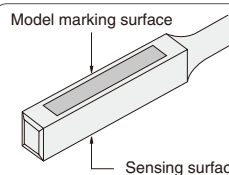

In the ZC type sensor switches, the opposite side from the model marking surface is the sensing surface side. Mount it so that the cylinder magnet comes to the sensing surface side.

When installing 2 or more knock cylinders with magnets, which are located close to each other in parallel, follow the conditions shown below.

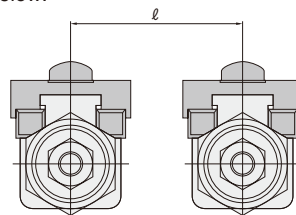

Bore size	ℓ dimension
6 [0.236in.]	23mm [0.906in.] or more
10 [0.394in.]	24mm [0.945in.] or more
16 [0.630in.]	26mm [1.024in.] or more


KNOCK CYLINDERS

Double Acting Type

Specifications

Item	Bore size mm [in.]			
		6 [0.236]	10 [0.394]	16 [0.630]
Operation type		Double acting type		
Media		Air		
Operating pressure range		0.15~0.7	0.1~0.7	0.08~0.7
	MPa [psi.]	[22~102]	[15~102]	[12~102]
Proof pressure	MPa [psi.]	1.03 [149]		
Operating temperature range	°C [°F]	0~60 [32~140]		
Operating speed range	mm/s [in./sec.]	50~500 [2.0~19.7]		
Cushion		Rubber bumper		
Lubrication		Not required (If lubrication is required, use Turbine Oil Class 1 [ISO VG32] or equivalent.)		
Port size		M5×0.8		
Stroke tolerance	mm [in.]	$+1 \begin{bmatrix} +0.039 \\ 0 \end{bmatrix}$		
Mounting type		Basic type, Foot mounting type, Flange mounting type, Pivot mounting type		

Symbol

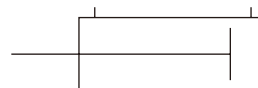

Bore Size and Stroke

		mm
Bore size	Standard strokes	
6	5, 10, 15, 20	
10	5, 10, 15, 20, 25, 30	
16	5, 10, 15, 20, 25, 30	

Cylinder Thrust

Bore size mm [in.]	Piston rod dia. mm [in.]	Operation	Pressure area mm ² [in. ²]	Air pressure MPa [psi.]						N [lbf.]
				0.1 [15]	0.2 [29]	0.3 [44]	0.4 [58]	0.5 [73]	0.6 [87]	0.7 [102]
6 [0.236]	3 [0.118]	Push side	28.3 [0.0439]	—	5.7 [1.28]	8.5 [1.91]	11.3 [2.54]	14.2 [3.19]	17 [3.82]	19.8 [4.45]
		Pull side	21.2 [0.0329]	—	4.2 [0.94]	6.4 [1.44]	8.5 [1.91]	10.6 [2.38]	12.7 [2.85]	14.8 [3.33]
10 [0.394]	5 [0.197]	Push side	78.5 [0.1216]	7.8 [1.75]	15.7 [3.53]	23.6 [5.31]	31.4 [7.06]	39.3 [8.83]	47.1 [10.59]	55 [12.36]
		Pull side	58.9 [0.0913]	5.9 [1.33]	11.8 [2.65]	17.7 [3.98]	23.6 [5.31]	29.5 [6.63]	35.3 [7.94]	41.2 [9.26]
16 [0.630]	6 [0.236]	Push side	201 [0.312]	20.1 [4.52]	40.2 [9.04]	60.3 [13.56]	80.4 [18.07]	100.5 [22.59]	120.6 [27.11]	140.7 [31.63]
		Pull side	172 [0.267]	17.2 [3.87]	34.4 [7.73]	51.6 [11.60]	68.8 [15.47]	86 [19.33]	103.2 [23.20]	120.4 [27.07]

Mass






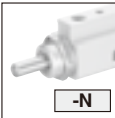
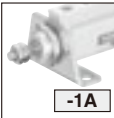



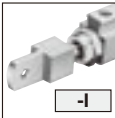

g [oz.]													
Bore size mm	Stroke mm	Basic type		Pivot mounting type	Additional mass								
		Standard cylinder	Cylinder with magnet		With 1 sensor switch (Cylinder with magnet only)				Foot mounting bracket	Flange mounting bracket	Pivot mount- ing bracket (with pin)	I type knuckles	Y type knuckles (with pin)
					ZC130□	ZC153□	CS5T□	CS11T□					
6	5	15 [0.529]	18 [0.635]	18 [0.635]	20 [0.705]				7 [0.247]	5 [0.176]	14 [0.494]	—	—
	10	17 [0.600]	20 [0.705]	20 [0.705]									
	15	19 [0.670]	22 [0.776]	22 [0.776]									
	20	21 [0.741]	24 [0.847]	24 [0.847]									
10	5	23 [0.811]	29 [1.023]	26 [0.917]	20 [0.705]				9 [0.317]	6 [0.212]	24 [0.847]	16 [0.564]	23 [0.811]
	10	26 [0.917]	32 [1.129]	29 [1.023]									
	15	29 [1.023]	35 [1.235]	32 [1.129]									
	20	32 [1.129]	38 [1.340]	35 [1.235]									
	25	35 [1.235]	41 [1.446]	38 [1.340]									
	30	38 [1.340]	44 [1.552]	41 [1.446]									
16	5	42 [1.481]	50 [1.764]	49 [1.728]	20 [0.705]				24 [0.847]	15 [0.529]	55 [1.940]	22 [0.776]	18 [0.635]
	10	46 [1.623]	54 [1.905]	53 [1.869]									
	15	50 [1.764]	58 [2.046]	57 [2.011]									
	20	54 [1.905]	62 [2.187]	61 [2.152]									
	25	58 [2.046]	66 [2.328]	65 [2.293]									
	30	62 [2.187]	70 [2.469]	69 [2.434]									

Calculation example: To add 2 sensor switches to the cylinder with magnet NDAS10×20: 38+(20×2)=78g [2.751oz.]

Remark: There are 2 types of sensor switch lead wire lengths.

A: 1000mm [39in.], B: 3000mm [118in.]

Order Codes for Double Acting Type

Cylinder specification	System	Piston rod specification	Mounting type ^{Note2}	Knuckles ^{Note3}	Sensor switch type	Lead wire length	Number of sensor switches		
Blank: Standard cylinder ^{Note1} S: Cylinder with magnet	Standard  Blank	Male thread  Blank	Basic type  Blank	No knuckle  Blank	Blank: No sensor switch -ZC130: With ZC130 ● Solid state type ● With indicator lamp ● DC10~28V ● 2-lead wire -ZC153: With ZC153 ● Solid state type ● With indicator lamp ● DC4.5~28V ● 3-lead wire -CS5T: With CS5T ● Reed switch type ● Without indicator lamp ● DC5~28V ● AC85~115V -CS11T: With CS11T ● Reed switch type ● With indicator lamp ● DC10~28V	A: 1000mm [39in.] B: 3000mm [118in.]	Blank: No sensor switch 1: With 1 sensor switch 2: With 2 sensor switches		
	Non-ion specification  -NCU	Plain rod  -N	Foot mounting type  -1A Flange mounting type  -3 Pivot mounting type  -8 Pivot mounting type (with bracket, pin and snap ring)  -8-8E	With I type knuckle  -I With Y type knuckle (Bracket with pin)  -Y					
Basic type		Bore size × Stroke							
NDA	S	×	-NCU	-N	-1A -3 -8 -8-8E	-I -Y	-ZC130 -ZC153 -CS5T -CS11T	A B	1 2

● See the table for bore size and stroke.
 ● Non-ion specification is made to order. Consult us about delivery.
 ● Pivot mounting type not available.
 ● Can be mounted only with the male thread type piston rod.
 ● For the order code of sensor switches only, see p.90.
 ● For the 5mm cylinder stroke, 1 sensor switch installation is standard with CS5T and CS11T. For 2 switches, use the solid-state type.

Notes 1: The magnet for the sensor switch is not built in. Use the cylinder with magnet when using a sensor switch.
 2: Mounting brackets are included at shipping.
 3: Knuckles are not available in the $\phi 6$ [0.2336in.] bore size. For other bores, knuckles are included at shipping.

Additional Parts (To be ordered separately)



Foot mount bracket



Flange mount bracket



Pivot mount bracket (with pin and snap ring)



I type knuckle




Y type knuckle (with pin)

Remark: For the cylinder joint and cylinder rod end mounted on the piston rod end, see p.1568.


- For the order code, see p.89.
- Pivot mount bracket can be mounted only on the pivot mounting type cylinder.

Inner Construction and Major Parts

● Standard cylinder

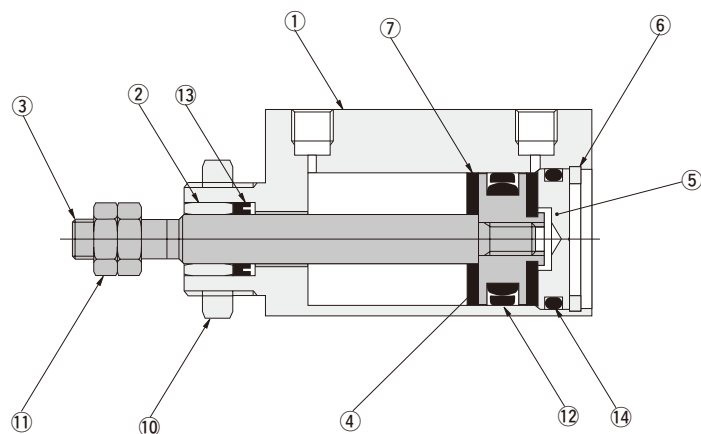

● Cylinder with magnet

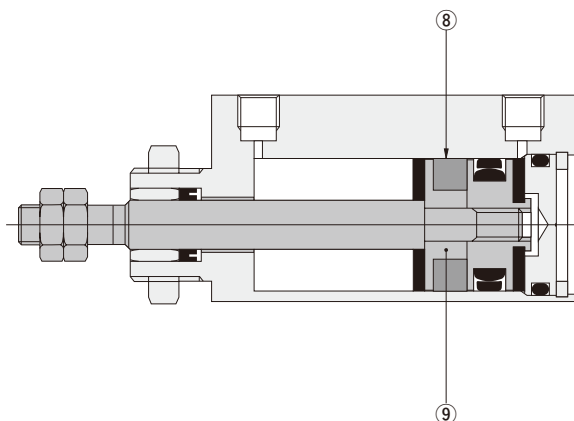

Major Parts and Materials

No.	Parts	Materials	
		Standard specification	Non-ion specification
①	Body	Aluminum alloy (anodized)	←
②	Rod bushing	Oil impregnated bronze	Special steel
③	Piston rod	Stainless steel	←
④	Piston	Brass	Aluminum
⑤	Head cover	Aluminum alloy (anodized)	←
⑥	Snap ring	Steel (nickel plated)	←
⑦	Bumper	Synthetic rubber (NBR)	←

Note: The $\phi 6$ body cannot be disassembled.

No.	Parts	Materials	
		Standard specification	Non-ion specification
⑧	Magnet	$\phi 6$: Sintered alloy magnet $\phi 10 \cdot \phi 16$: Plastic magnet	←
⑨	Magnet support	Brass	Aluminum
⑩	Mounting nut	Steel (nickel plated)	←
⑪	Rod end nut	Steel (nickel plated)	←
⑫	Piston seal	Synthetic rubber (NBR)	←
⑬	Rod seal		
⑭	O-ring		

Seals

Parts Bore mm [in.]	Rod seal	Piston seal	O-ring
6 [0.236]	MY-6×3×2	COP-6L	6.9×4.5×1.2
10 [0.394]	MY-8×5×2	COP-10L	12×9×1.5
16 [0.630]	MY-9×6×2	COP-16L	17.2×14×1.6

KNOCK CYLINDERS

Single Acting Push Type

Symbol








Specifications

Item	Bore size mm [in.]		
	6 [0.236]	10 [0.394]	16 [0.630]
Operation type	Single Acting Push Type		
Media	Air		
Operating pressure range MPa [psi.]	0.2~0.7 [29~102]	0.15~0.7 [22~102]	
Proof pressure MPa [psi.]	1.03 [149]		
Operating temperature range °C [°F]	0~60 [32~140]		
Operating speed range mm/s [in./sec.]	50~500 (In applications with high load ratio or high speed, use externally mounted stopper.) [2.0~19.7]		
Cushion	None		
Lubrication	Not required (If lubrication is required, use Turbine Oil Class 1 [ISO VG32] or equivalent.)		
Mounting type	Panel mount, Foot mount, Insert mount		
Port size	M5×0.8		
Stroke tolerance mm [in.]	$+1 \begin{matrix} +0.039 \\ 0 \end{matrix}$ $0 \begin{matrix} 0 \\ 0 \end{matrix}$		

Cylinder Thrust (Push Side)

Bore size mm [in.]	Pressure area mm ² [in. ²]	Air pressure MPa [psi]					
		0.2 [29]	0.3 [44]	0.4 [58]	0.5 [73]	0.6 [87]	0.7 [102]
6 [0.236]	28.3 [0.0439]	2.3 [0.52]	5.1 [1.15]	7.9 [1.78]	10.8 [2.43]	13.6 [3.06]	16.4 [3.69]
10 [0.394]	78.5 [0.1216]	8.3 [1.87]	16.2 [3.64]	24.0 [5.40]	31.9 [7.17]	39.7 [8.92]	47.6 [10.70]
16 [0.630]	201 [0.312]	25.5 [5.73]	45.6 [10.25]	65.7 [14.77]	85.8 [19.29]	105.9 [23.81]	126.0 [28.32]

Order Codes for Single Acting Push Type

System (Made to order) Blank : Standard specifications NCU : Non-ion specification ● Counter-measured for preventing generation of copper ions ● Made to order	Piston rod specification Male thread  Blank Plain rod  -N	Mounting type Panel mount  Blank Foot mount  -1 Insert mount  -6 ● With mounting bolt ● Mounting bracket is included at shipping. ● Gasket is included at shipping.
Basic type	Bore size × Stroke	
NSA	×	-NCU -N -1 -6

Remark: For the cylinder joint and cylinder rod end mounted on the piston rod end, see p.1568.

Bore Size and Stroke

Bore size	Standard strokes	
	mm	
6	5, 10, 15	
10		
16		

Mass

Mounting type	Bore size mm	Stroke mm		
		5	10	15
Panel mount Insert mount	6	13 [0.459]	15 [0.529]	17 [0.600]
	10	28 [0.988]	31 [1.093]	35 [1.235]
Foot mount	16	77 [2.716]	85 [2.998]	94 [3.316]
	6	29 [1.023]	31 [1.093]	33 [1.164]
	10	58 [2.046]	61 [2.152]	65 [2.293]
	16	166 [5.855]	174 [6.138]	183 [6.455]


Remarks: 1. One mounting nut is included with the panel mount and insert mount.
2. Two mounting bolts with foot mounting brackets are included with the foot mount.

Spring Return Force

Bore size mm [in.]	Zero stroke	
	End of stroke	
6 [0.236]	1.5 [0.34]	3.4 [0.76]
10 [0.394]	2.5 [0.56]	7.4 [1.66]
16 [0.630]	5.4 [1.21]	14.7 [3.30]

Remarks: 1. Avoid application that carries loads on the spring return side.
2. This value is virtually constant regardless of the cylinder stroke.

Inner Construction and Major Parts (Figure below shows insert mount type)

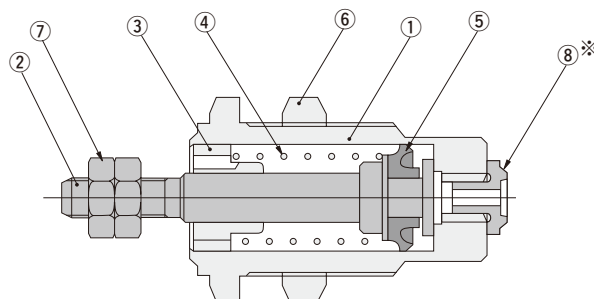

Major Parts and Materials

No.	Parts	Materials	
		Standard specification	Non-ion specification
①	Cylinder body	Brass (nickel plated)	Special steel
②	Piston, Piston rod	Stainless steel	←
③	Rod bushing	Phosphor bronze	Special steel
④	Spring	Steel (zinc plated)	←
⑤	Piston seal	Synthetic rubber (NBR)	←
⑥	Mounting nut	Brass (nickel plated)	Special steel
⑦	Rod end nut	Steel (nickel plated)	←
⑧*	Gasket	Synthetic rubber (NBR)	←

*The gasket is for the insert mount only.

BRACKETS (FOR DOUBLE ACTING TYPE)


Mounting Brackets, Knuckles, Brackets with Pin

Mounting Brackets

Bore size mm [in.]	Mounting brackets	Foot mounting bracket	Flange mounting bracket	Pivot mounting bracket (with pin and snap ring)
6 [0.236]		1A-NDA6	3-NDA6	8E-NDA6
10 [0.394]		1A-NDA10	3-NDA10	8E-NDA10
16 [0.630]		1A-NDA16	3-NDA16	8E-NDA16

Remarks: 1. See p.84~86 for dimensions of the mounting brackets.
2. Pivot mounting bracket can be used only on the pivot mount type cylinder.


Order codes

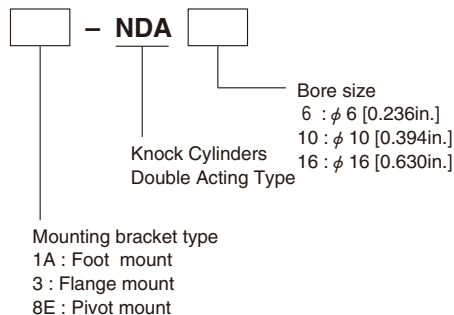



Knuckles

Bore size mm [in.]	Mounting brackets	I type knuckle	Y type knuckle (With pin)
10 [0.394]		I-NDA10	Y-NDA10
16 [0.630]		I-NDA16	Y-NDA16

Order codes

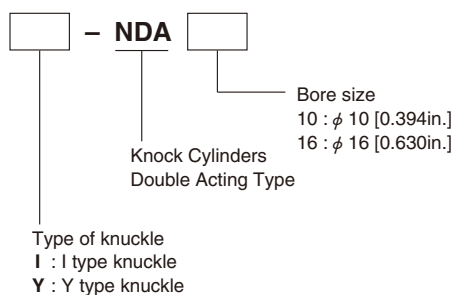


I type

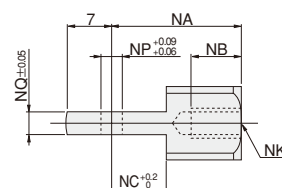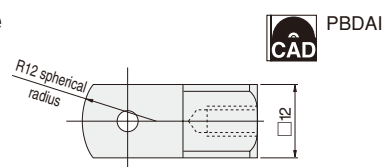


Code	NA	NB	NC	NK	NP	NQ
Bore mm [in.]						
10 [0.394]	21	8	9	M4×0.7	3.2	3.1
16 [0.630]	25	8	14	M5×0.8	5	6.4

Y type

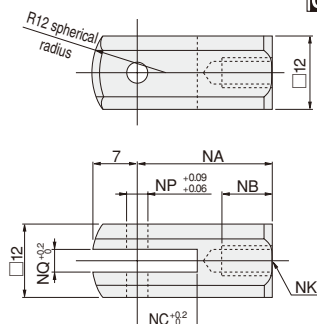

Code	NA	NB	NC	NK	NP	NQ
Bore mm [in.]						
10 [0.394]	21	8	10	M4×0.7	3.2	3.2
16 [0.630]	21	11	10	M5×0.8	5	6.5

Pin and bracket for Y type knuckle

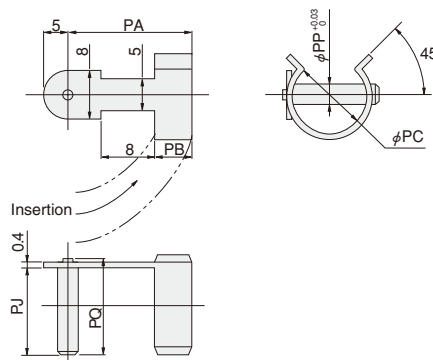


Code	PA	PB	PC	PJ	PP	PQ
Bore mm [in.]						
10 [0.394]	17	5	14	13.5	3.2	(15)
16 [0.630]	17	5	14	13.5	5	(15)

SENSOR SWITCHES

Solid State Type, Reed Switch Type

Symbol

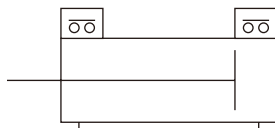

Order Codes (For Sensor Switches Only)

		Sensor switch model	Option Lead wire length	With sensor holder
Solid state type With indicator lamp	DC10~28V	ZC130	A B	-NDAS
Solid state type With indicator lamp	DC4.5~28V	ZC153		
Reed switch type Without indicator lamp	DC5~28V AC85~115V	CS5T		
Reed switch type With indicator lamp	DC10~28V	CS11T		


- A : 1000mm [39in.]
- B : 3000mm [118in.]

- The same sensor holder is used for $\phi 6$, $\phi 10$ and $\phi 16$.

- For sensor switch details, see p.1544.
- ★ Order code for the sensor holder only.
C1-NDAS

Moving Sensor Switch

- Loosening mounting screw allows the sensor switch to be moved freely in the cylinder's axial direction.
- Tighten the mounting screw with a tightening torque of 19.6N·cm [1.73in·lbf] or less.

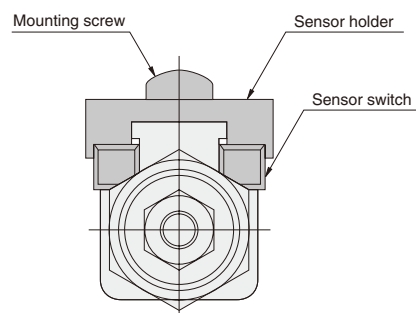

Minimum Cylinder Stroke When Using Sensor Switch

Bore size	Solid state type sensor switch		Reed switch type sensor switch	
	Mounting 2 pcs.	Mounting 1 pc.	Mounting 2 pcs.	Mounting 1 pc.
6 [0.236]	5 [0.197]	5 [0.197]	10 [0.394]	5 [0.197]
10 [0.394]				
16 [0.630]				


Remark: In the reed switch type sensor switch, 1 sensor switch installation is standard for the 5mm cylinder stroke.

Sensor Switch Operating Range, Response Differential and Maximum Sensing Location

- Operating range: ℓ
The distance the piston travels in one direction, while the switch is in the ON position.
- Response differential: C
The distance between the point where the piston turns the switch ON and the point where the switch is turned OFF as the piston travels in the opposite direction.


Bore size	ZC130□, ZC153□		CS5T□, CS11T□	
	Operating range	Response differential	Operating range	Response differential
6 [0.236]	2.5~4.0 [0.098~0.157]	0.3 [0.012] or less	3.5~7.5 [0.138~0.295]	1.3 [0.051] or less
10 [0.394]	2.0~4.0 [0.079~0.157]	0.3 [0.012] or less	3.5~8.5 [0.138~0.335]	1.6 [0.063] or less
16 [0.630]	2.5~4.0 [0.098~0.157]	0.3 [0.012] or less	5.0~10.5 [0.197~0.413]	1.9 [0.075] or less

Remark: The above table shows reference values.

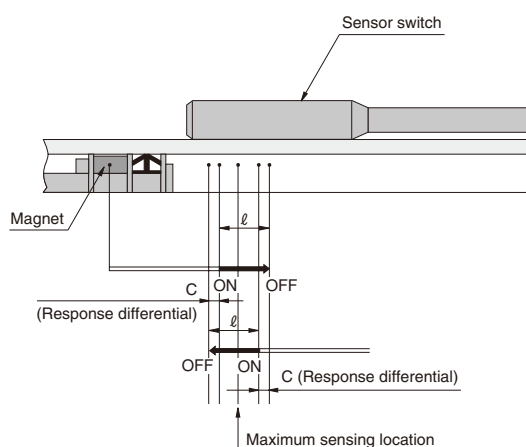


Mounting Location of End of Stroke Detection Sensor Switch

● For strokes 5 and 10

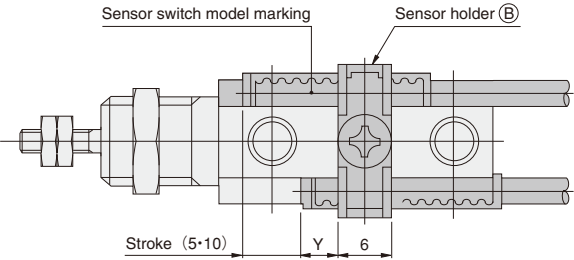

Bore size	Mounting location	Sensor switch model			
		ZC130□	ZC153□	CS5T□	CS11T□
6, 10 [0.236, 0.394]	X	10 [0.394]	8.5 [0.335]	12 [0.472]	
	Y	5 [0.197]	3.5 [0.138]	7 [0.276]	
16 [0.630]	X	10.5 [0.413]	9 [0.354]	12.5 [0.492]	
	Y	5.5 [0.217]	4 [0.157]	7.5 [0.295]	


● For stroke 15 and larger

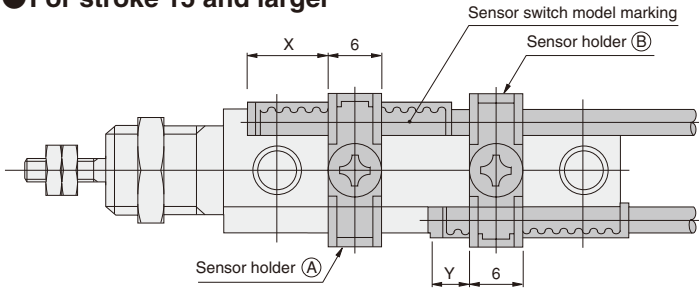


- Remarks:
1. The table at left gives reference values for the standard strokes. For the procedure to find-out the best position, see p.92.
 2. The above figures show the piping connection port when it has been turned to face upward.
 3. Mount the sensor switch so that the surface showing the model marking faces up.
 4. Sensor holder (A) is not available for the 5mm and 10mm strokes, and only sensor holder (B) is available. Two sensor switches can be mounted with a single sensor holder (B). In this case, the sensor switch mounting position on the rod side becomes the Y dimension (shown in the figure) + stroke.

Dimensions of Sensor Switch Mounting (mm)

● φ 6 [0.236in.]

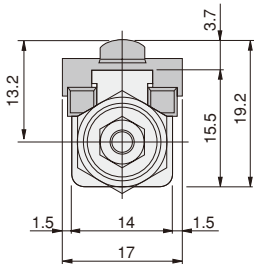

● φ 10 [0.394in.]

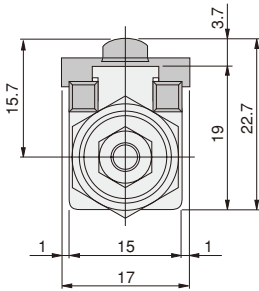

● φ 16 [0.630in.]

